




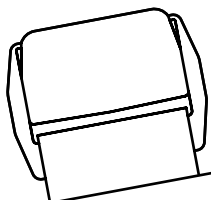



RESTRAP

TECHNICAL BIKEPACKING GEAR

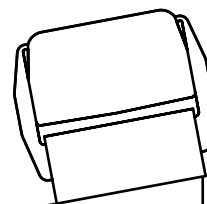


- Print this document on A4 paper (21x29.7cm) making sure that it is at 100% scale.
- Measure both sides of the crossed needles to verify the scale is accurate.
- Assemble the prints according to the numbered guide on each sheet, ensuring the registration marks lay on top of each other.
- Tape the sheets together, then cut along the bag's outline for a physical representation of our bag's shape and size.

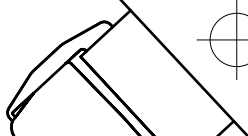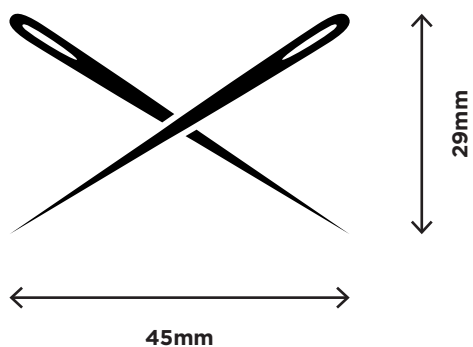

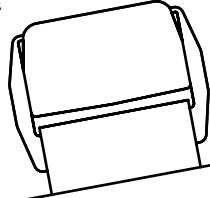


RESTRAP



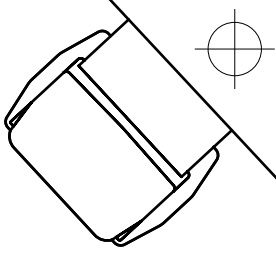


X5 STRAPS REQUIRED

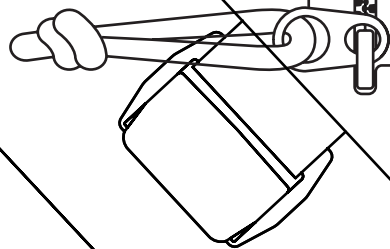

NUMBER GUIDE

<p>RESTRAP TECHNICAL BEKPACKING GEAR</p> <ul style="list-style-type: none"> • Push this component on 2x2 paper (24x36 inch) and lay flat for 24 hours. • Measure both sides of the material to be used. The width is constant. • Measure the entire assembly to be used. The length is constant. • Lay the pieces together. They will be used as a guide for the placement of the straps. <p>1</p>	<p>2</p>
<p>3</p>	<p>4</p>

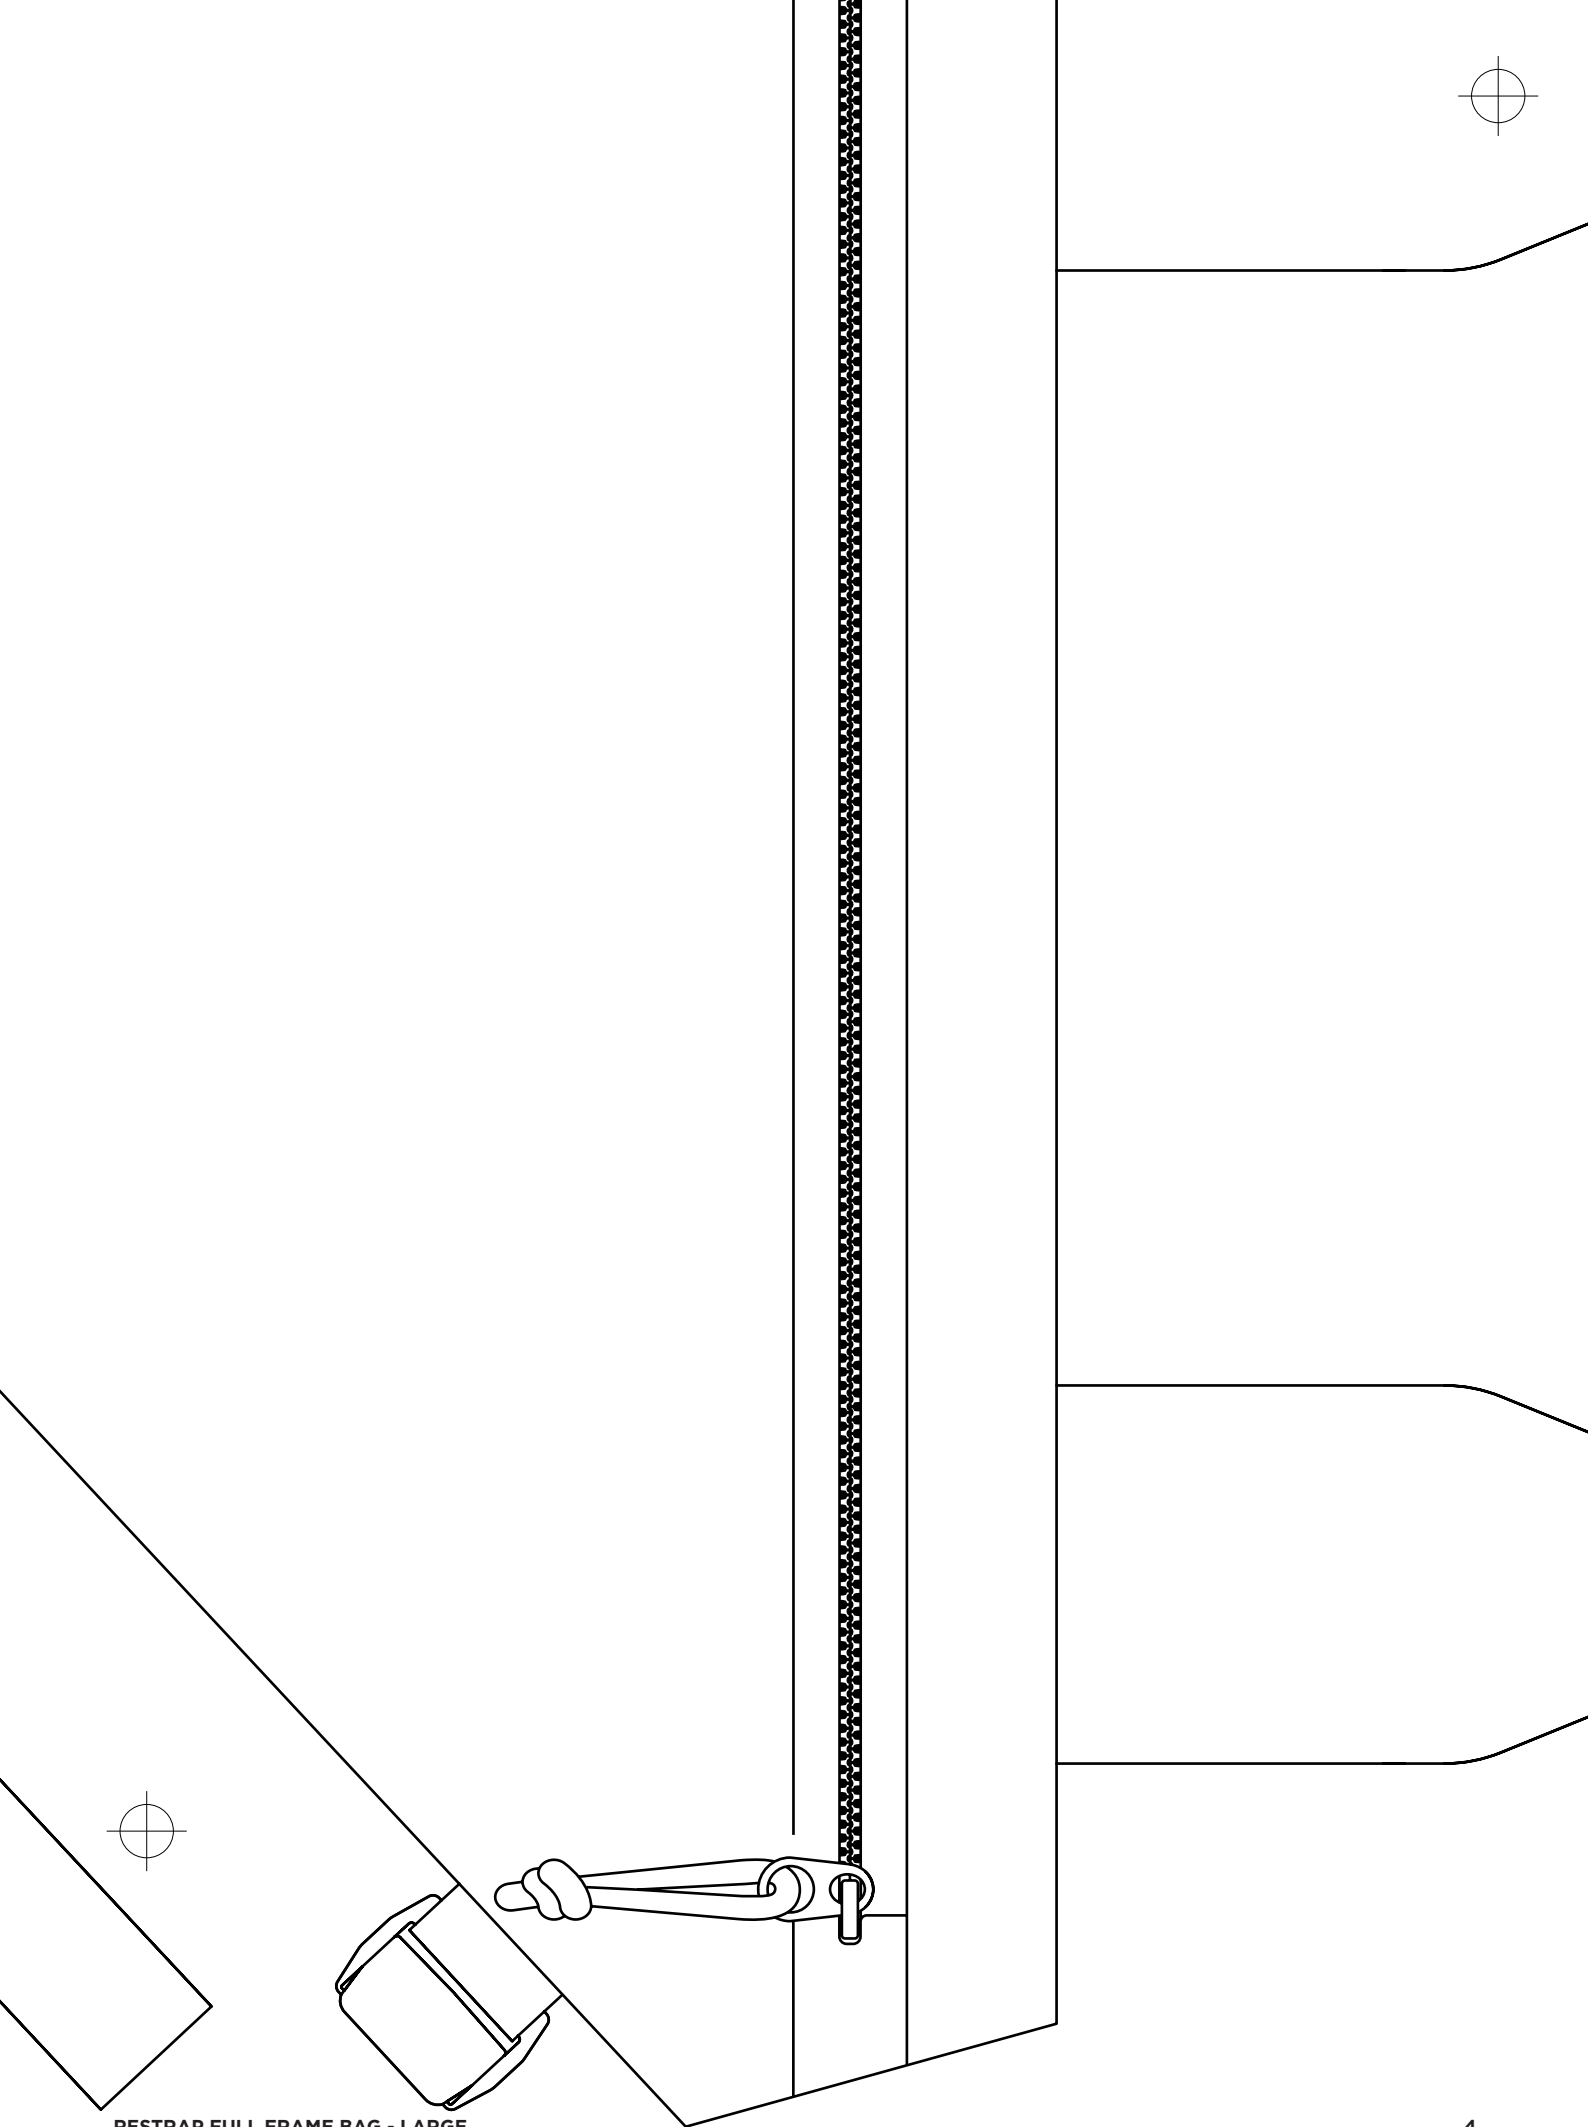

RESTRAP FULL FRAME BAG - LARGE