

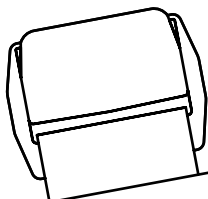



RESTRAP


TECHNICAL BIKEPACKING GEAR

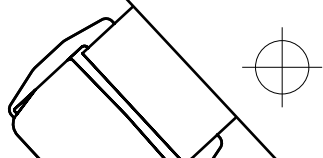


- Print this document on A4 paper (21x29.7cm) making sure that it is at 100% scale.
- Measure both sides of the crossed needles to verify the scale is accurate.
- Assemble the prints according to the numbered guide on each sheet, ensuring the registration marks lay on top of each other.
- Tape the sheets together, then cut along the bag's outline for a physical representation of our bag's shape and size.

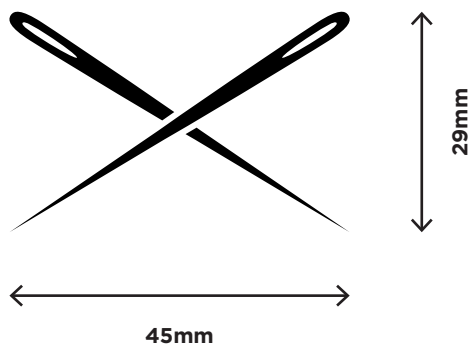

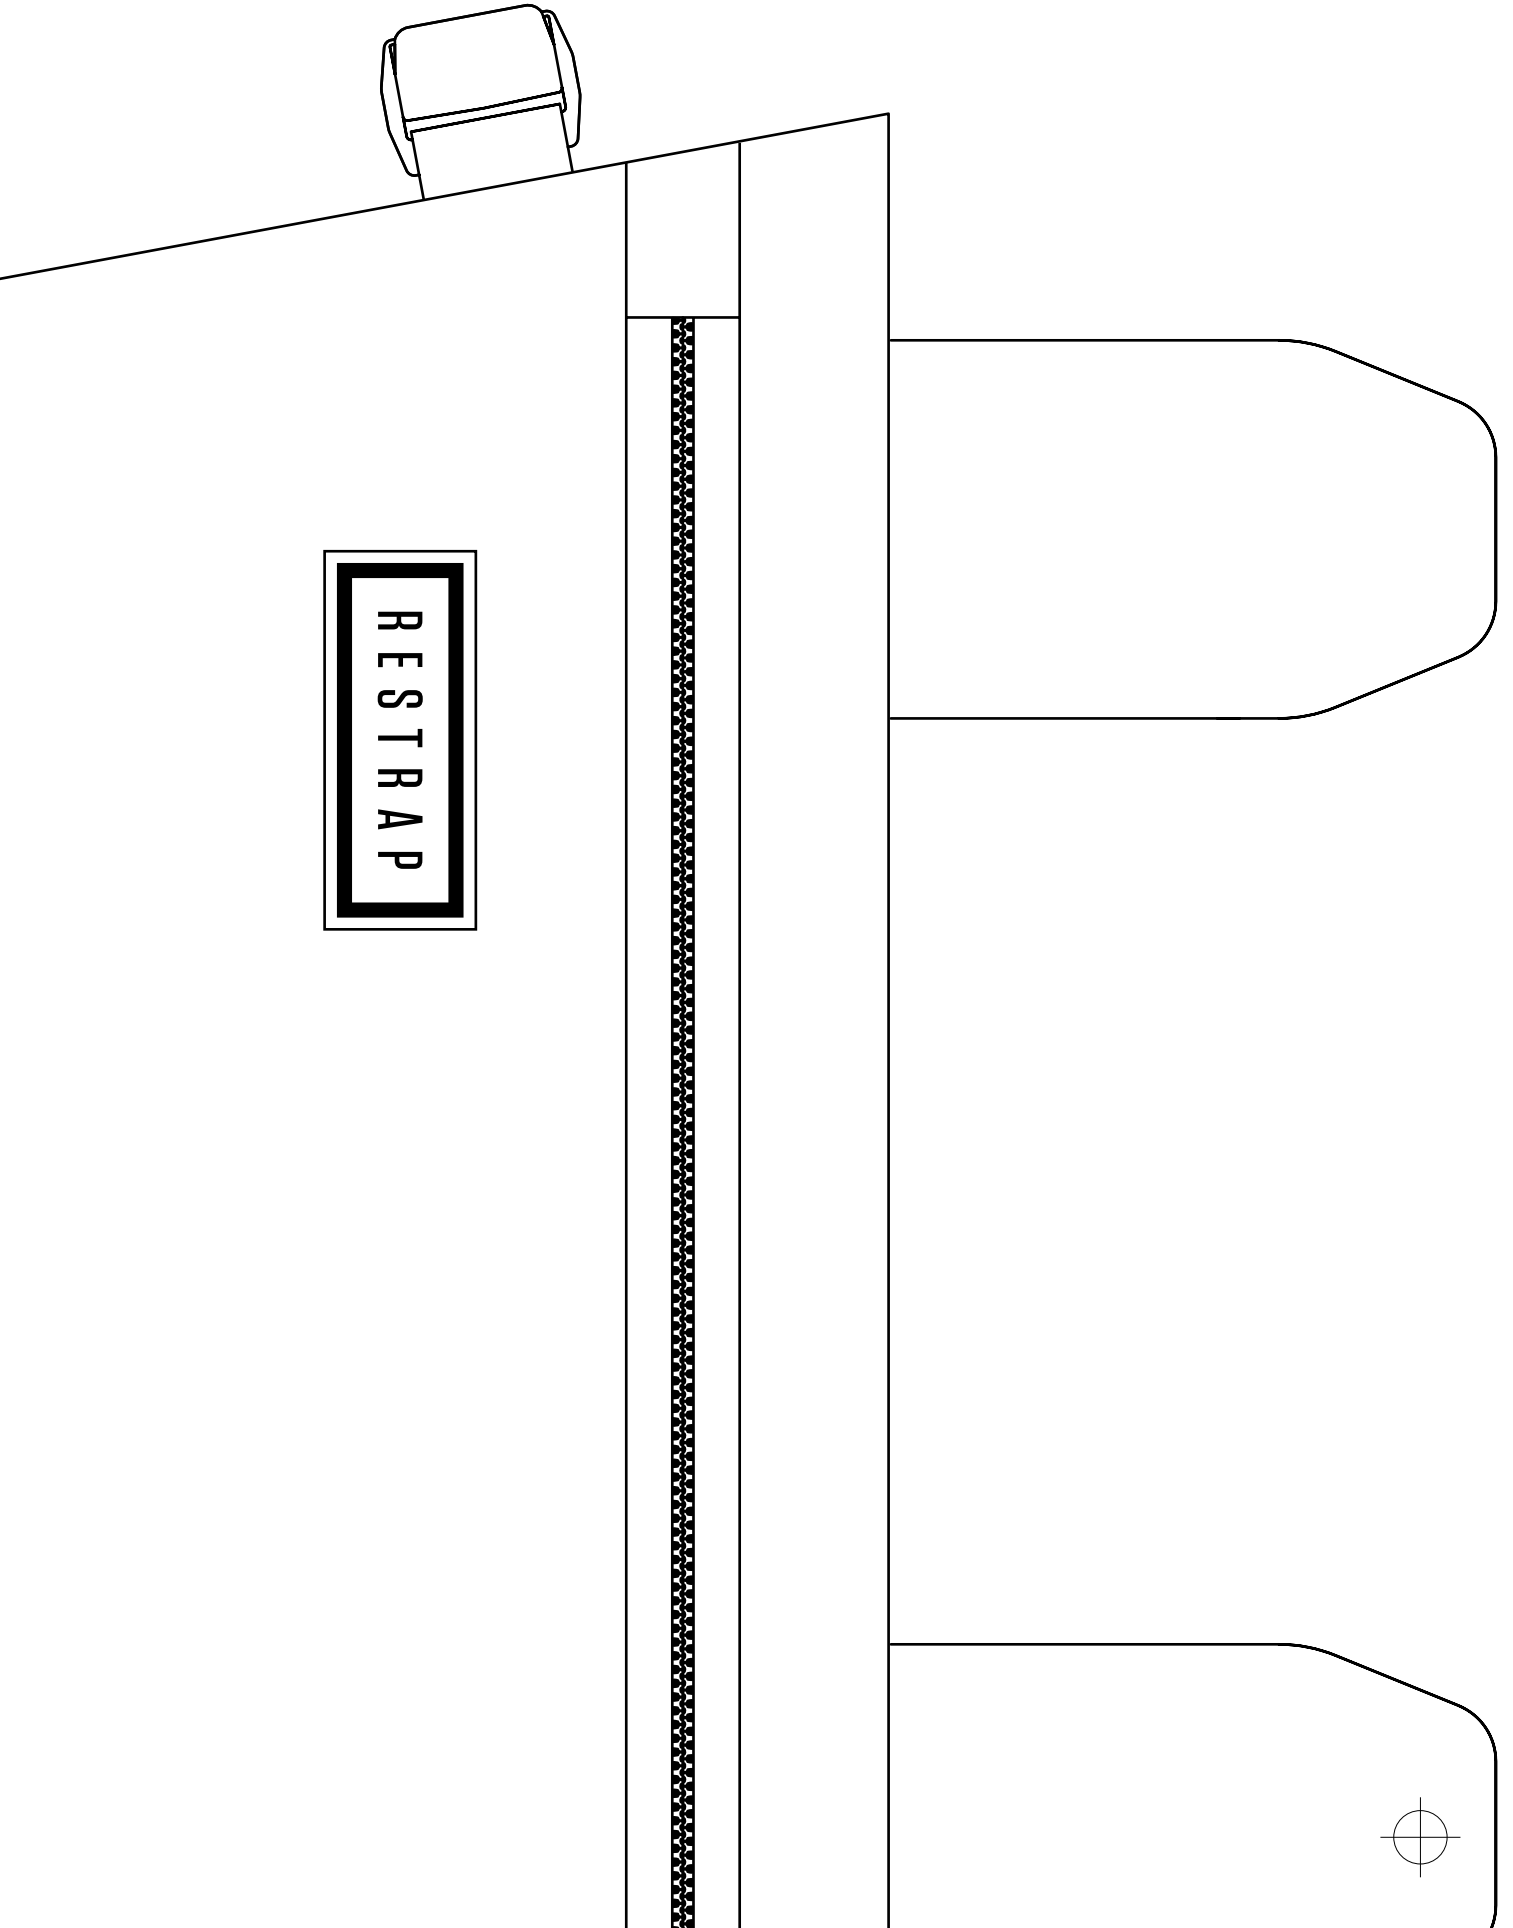

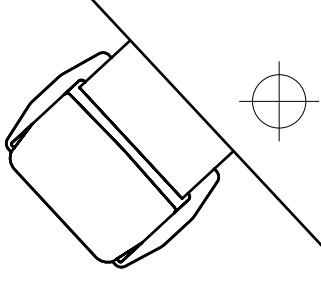

X5 STRAPS REQUIRED

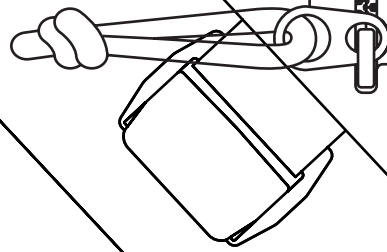

NUMBER GUIDE

